


WIPCOOL[®]

FEELING FOR MORE

OIL CHARGING PUMP R2

— OPERATION MANUAL —

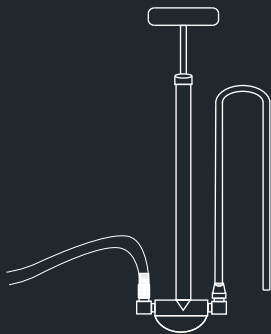


With Pressure Oil Charging ,
Reliable And Durable



Operating Steps

- 1) Take out the pump and oil transfer tube from the packing, connect one side of the charging tube to the pump and tighten the fitting.
- 2) Put the oil transfer tube into the oil tank, please ensure that the copper pipe contacts the bottom of the oil tank, and fix the oil transfer tube and the pump connector with a wrench after adjusting the position.
- 3) Attach another side of the charging tube to the system and release the air from hose then tighten the fitting at the system.
- 4) Open the valve of the compressor and fill the compressor with refrigerant oil slowly and evenly. Press the oil pump to the bottom every time you push it. In order to prevent the oil pump from moving or spinning during the oil charging process, please step on the foot of the oil pump base with feet so as to exert more force.
- 5) After charging, please remove the oil transfer tube from the system and close the valve.

DIMENSIONS:

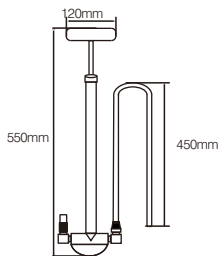

INSTRUCTIONS:

